

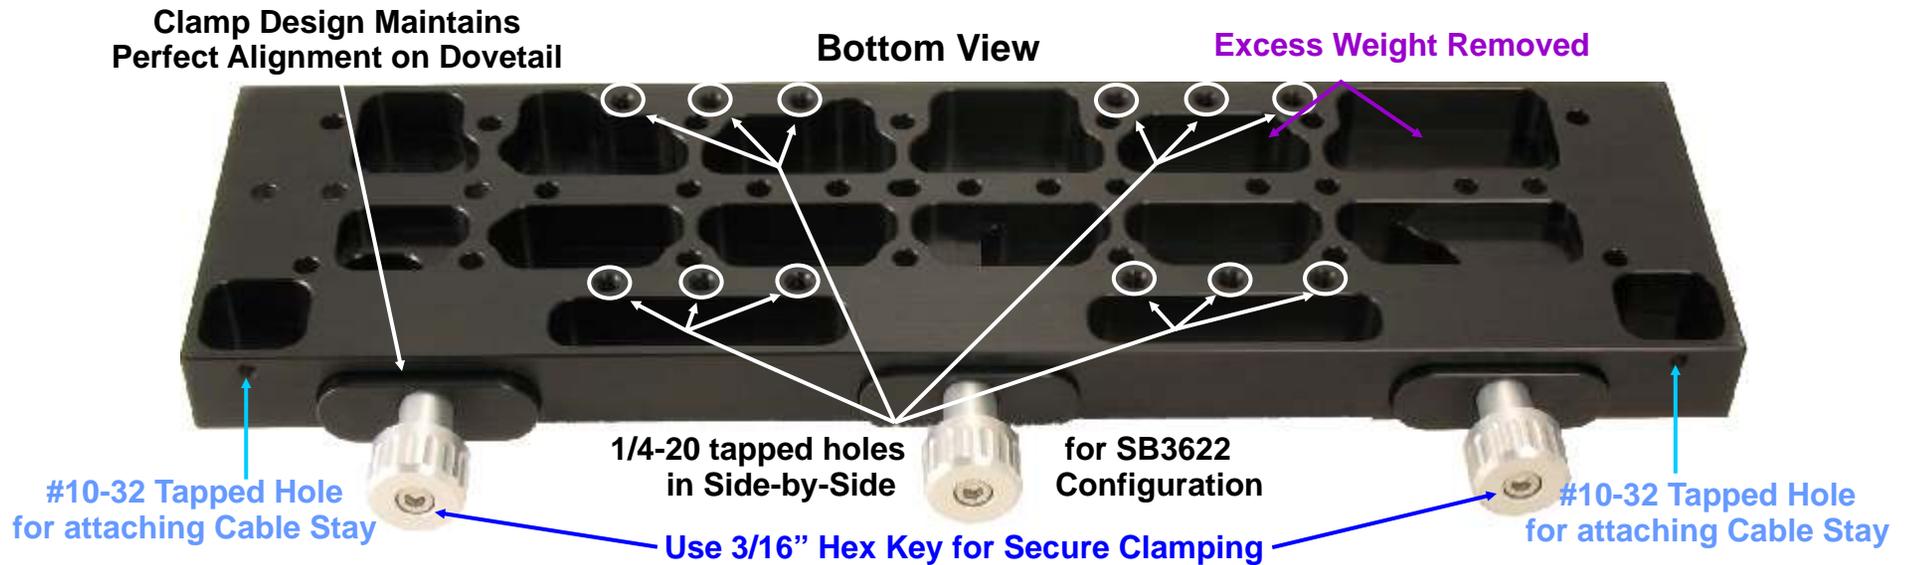


16" Easy-Balance Dovetail Saddle Plate for Losmandy "D" Series Plates (DOVELM162)

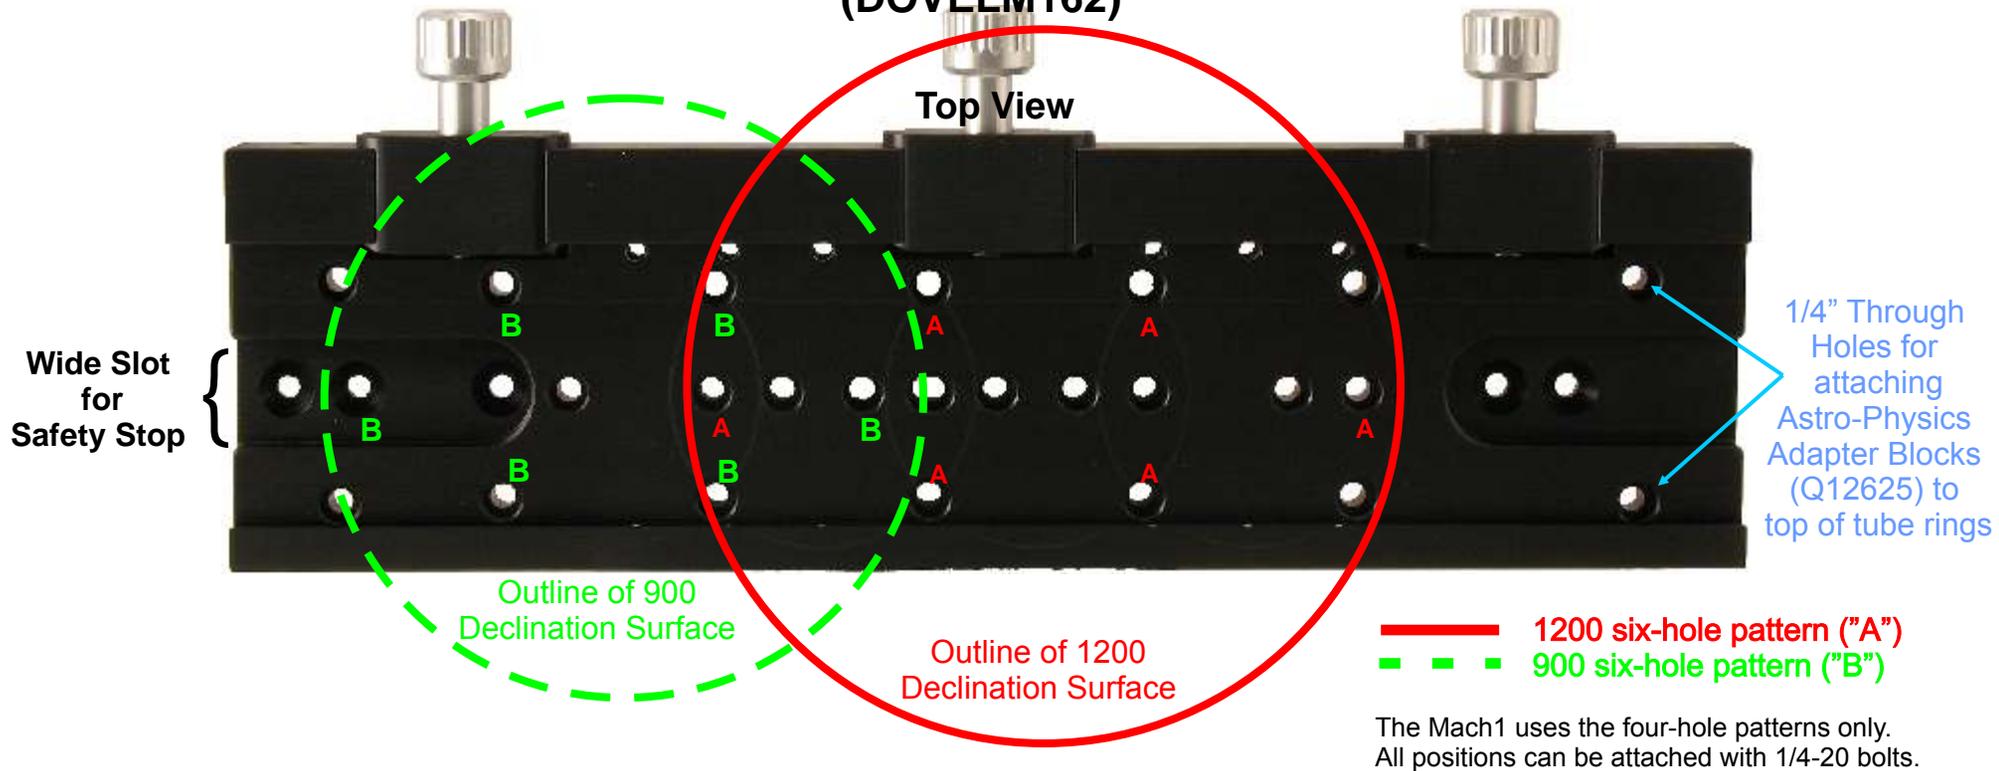


Included Screw Packet:


- Six 1/4-20x1" SHCS - for mounting to 900 & 1200. Use four for Mach1GTO.
- One 1/4-20x3/4" FHSCS - for 900 or 1200 in end positions (optional)
- Four 1/4-20x3/4" Socket Head Cap Screws - for mounting to SB3622

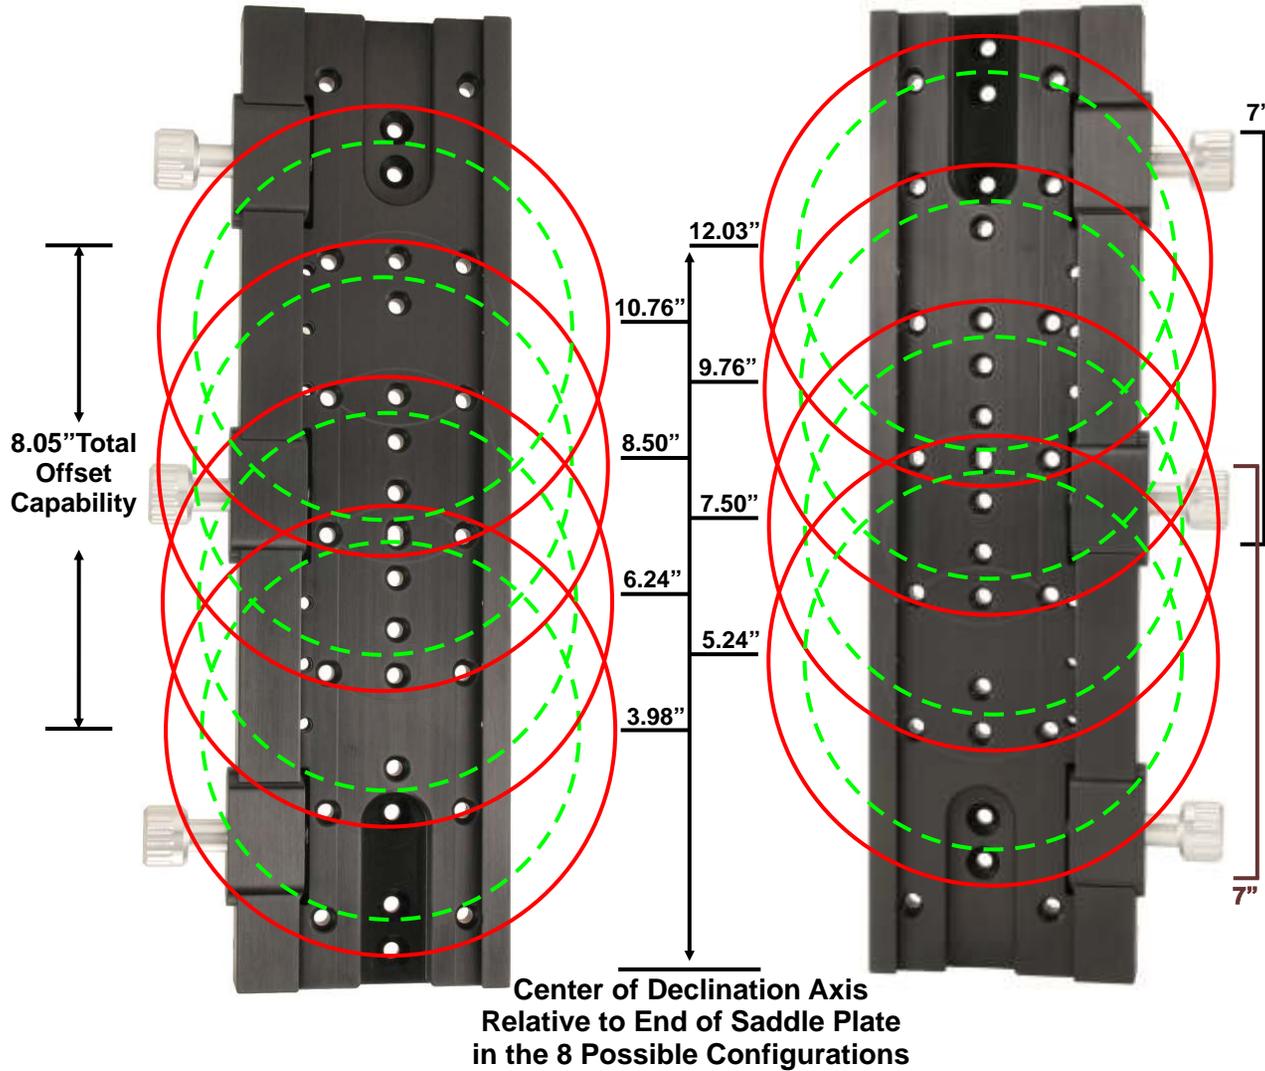

- Minimum useful dovetail plate length is 7" with both the center clamp and one of the end clamps engaged. No additional balance travel possible at this length.
- The AP 12" Sliding Bar has 10.5" of travel for balancing with two clamps engaged.
- A standard 13.5" Losmandy plate will have 12" of travel with two clamps engaged.
- The 17.25" plate has 5.25" of travel while keeping all three clamps engaged.
- The 18.925" plate has 6.925" of travel with three clamps.
- The 23.75" plate has 11.75" of travel with three clamps.

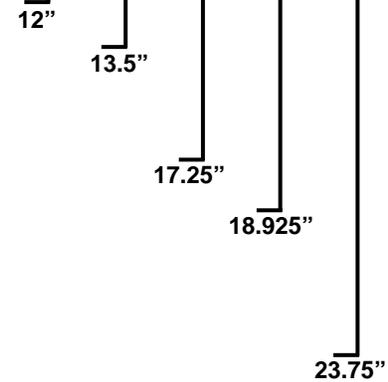

SB3622 Dovetail Sliding Bar with three DOVELM162 Saddle Plates

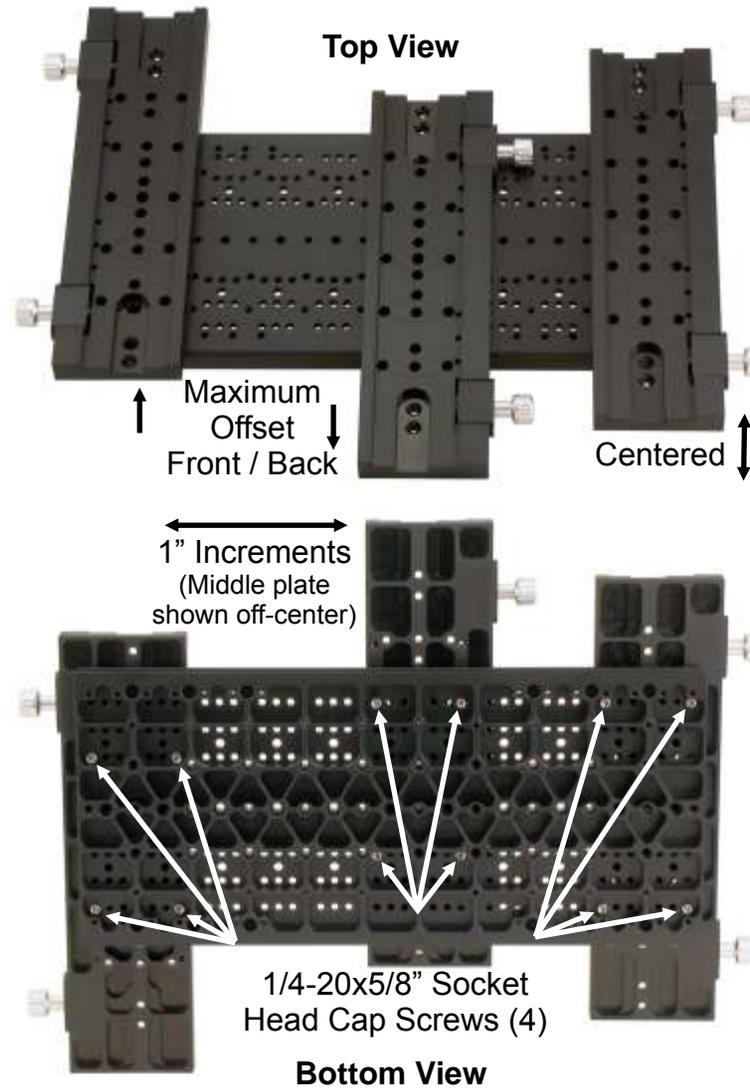

Note: These photos use the previous, 2-clamp version of the DOVELM162.